



**CLEVER CLICK RIGID**

# Herringbone Unzip Vinyl Flooring Installation Guide

---

Revolutionary, quick and easy flooring with  
the natural beauty of wood

# How to Install Clever Click Rigid

A Clever Click Rigid vinyl floor will transform your home and bring you years of pleasure.

---

## To assist you, we have created this concise step-by-step guide.

However, to make the most of Clever Click Rigid flooring, you must understand how to install the product properly. If you do not install your floor properly, the guarantee will be void.

## General application

SPC click is a vinyl floor with click system for use in domestic living areas, which is laid floating and does not need to be glued. Measure the length and width (surface area) of the room. If the room has a bay window or extension, measure these separately. We recommend at least an additional 10% to cover cutting errors, cutting waste or future use. The temperature of the room should not fall below 10°C.

## Tools and supplies

Tape measure, pencil, sharp stanley knife, spacer blocks, rubber hammer and fixing block.


---

## Before you start


During installation, make sure that you mix up the floor panels sufficiently so that there are not too many identical, lighter or darker panels next to each other.

## Installation options


Single

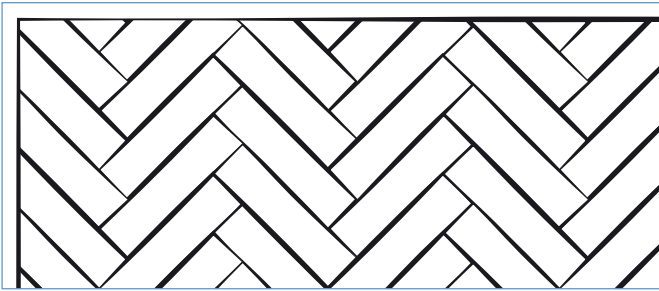


Diagonal

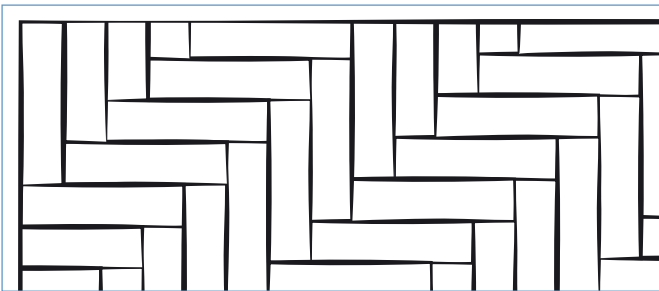


# How to Install Clever Click Rigid

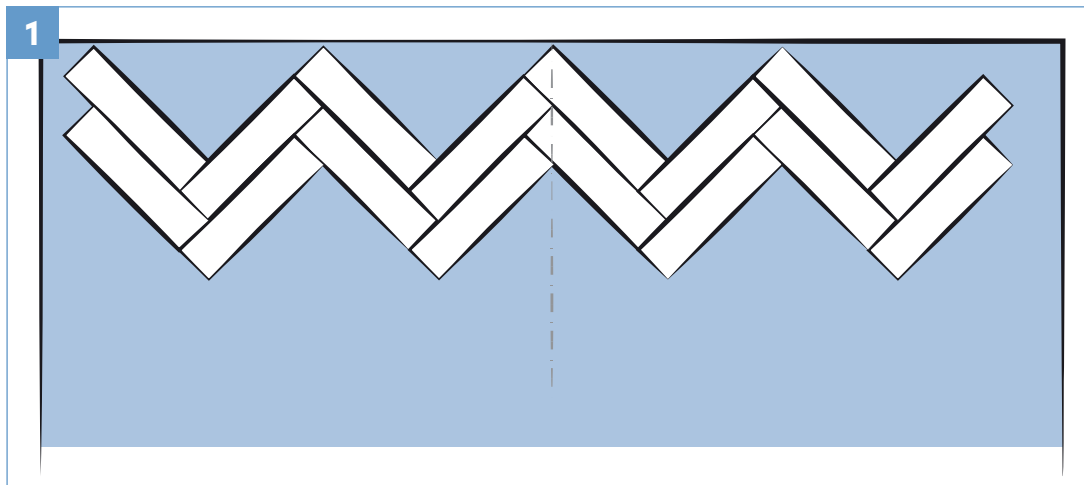

1. Measure the room before you start fitting. Indicate the middle of the width of the room.
2. First, fit an underlay if needed.
3. Start with laying a few complete zig-zag rows over the width of the room by connecting the short side of the panels into the long side of the adjacent panel (Figure 1).
4. For aesthetic purposes it is best to centre the middle of this row in the middle of the room (Figure 1).
5. In order to save on material waste, you could however shift the row a couple of centimetres from the centre of the room in order to avoid very short planks on the sides.

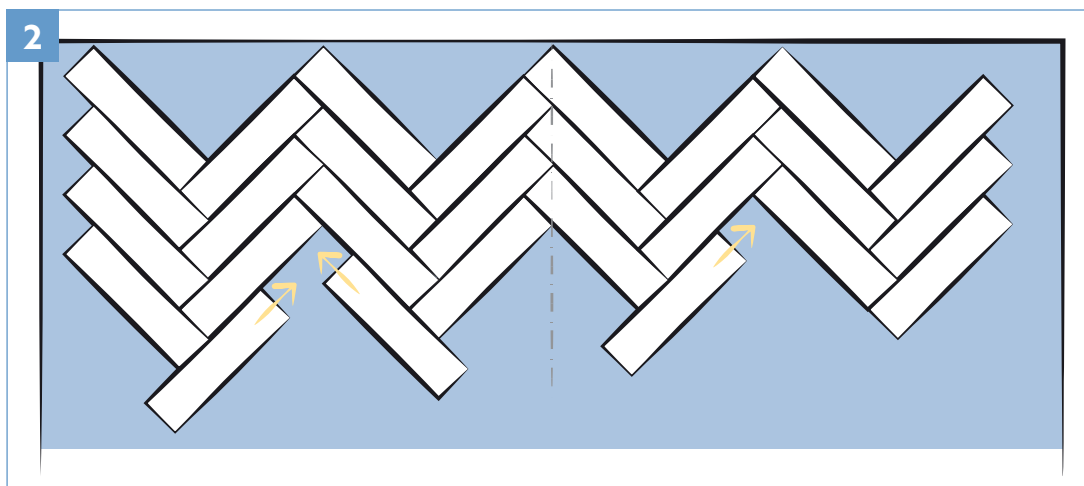


6. Start laying the successive rows from the left of the room. Follow the order indicated on the image below for the easiest installation method. (Figure 2)
7. To connect the panels: angle the long side of the panel in the long side of the adjacent panel in the row above. Use a snap movement to connect the short side of the panel in the long side of the second panel in the row above, you can use a rubber hammer and tapping block for snapping in. Make sure the panel is angled down completely before snapping in the short side (Figure 2).

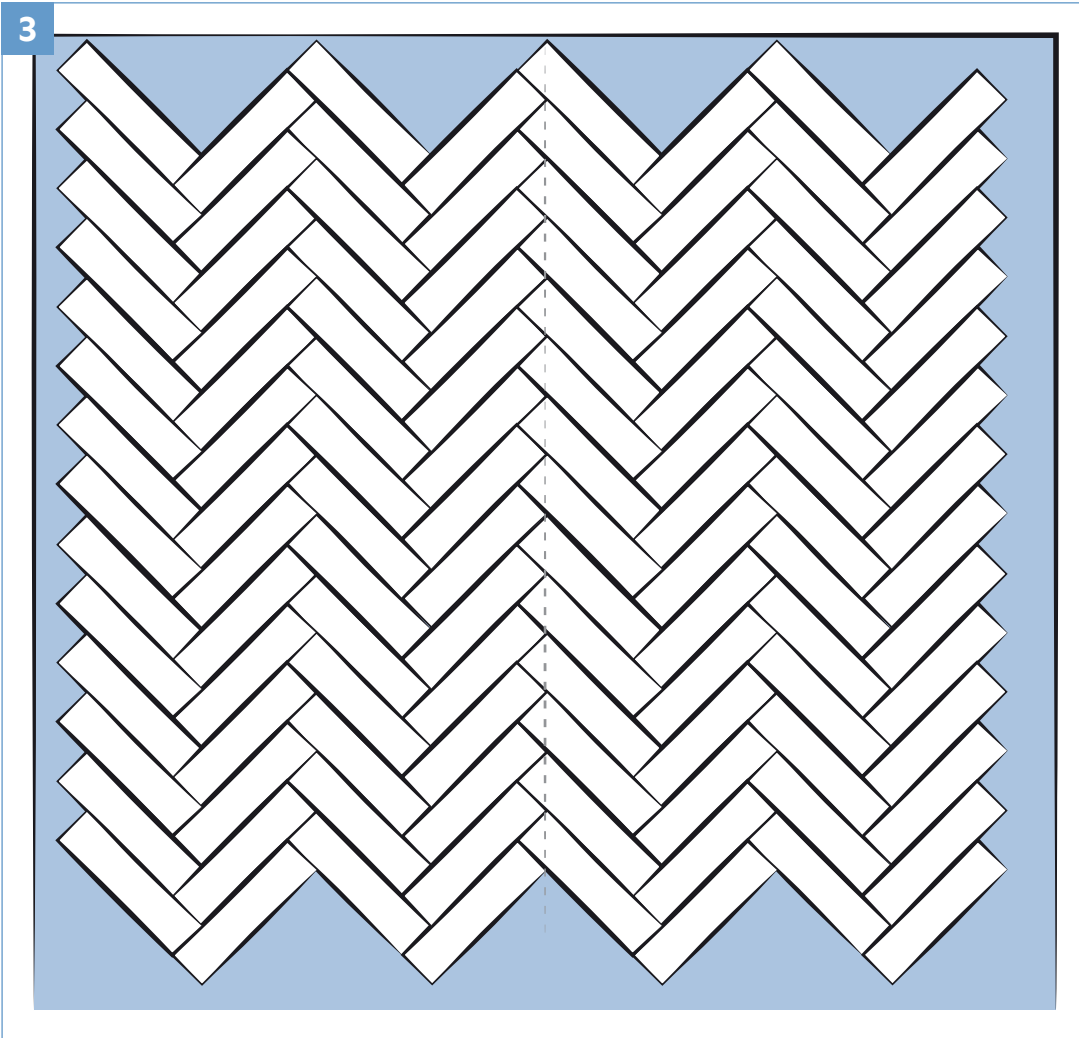

8. Continue the installation like this row by row towards the end of the room (Figure 3). Always check each joint before continuing.

# How to Install Clever Click Rigid

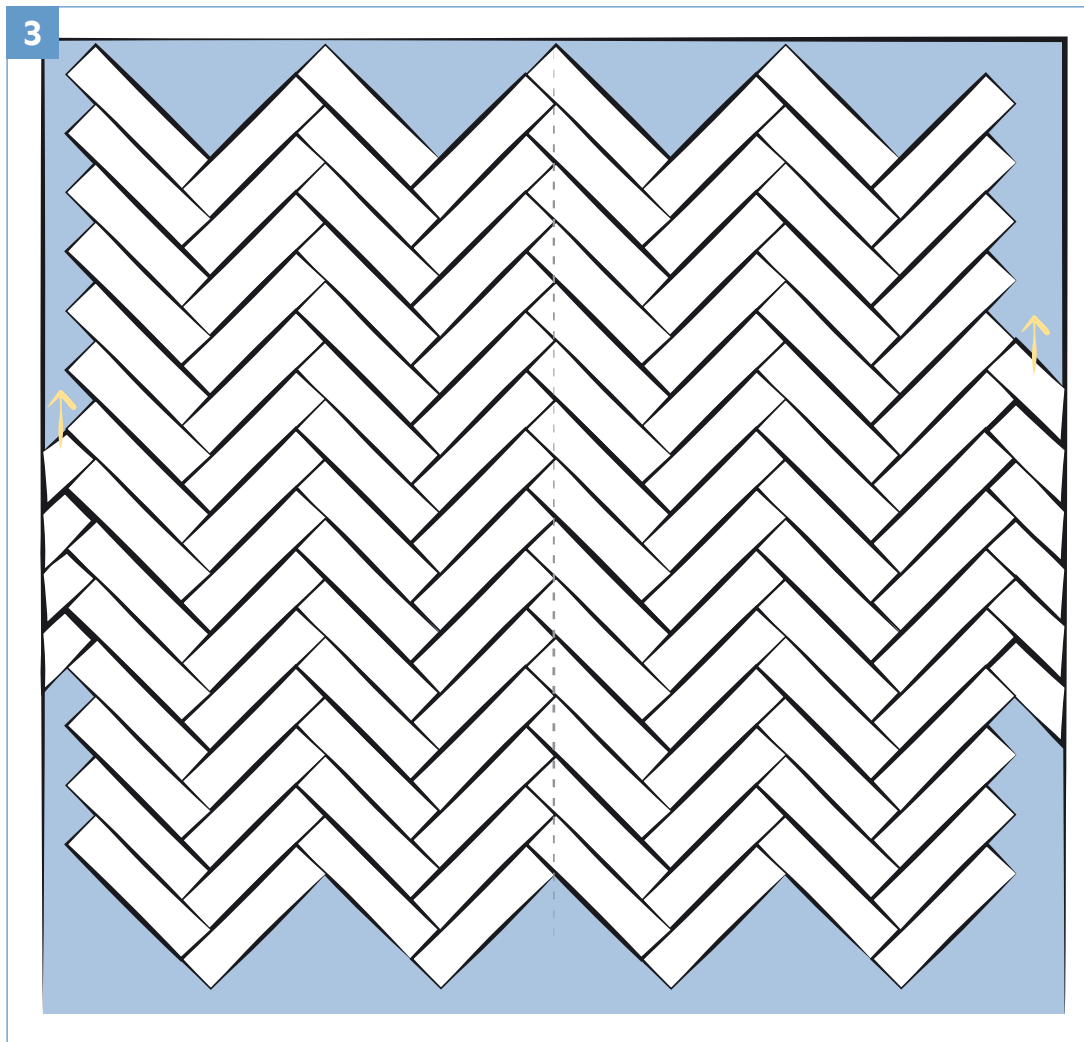

9. When no more rows can be fitted in the room, start measuring and cutting the left-over pieces on all four sides. Our recommended method: first fill up the floor area to the left and right of the already installed flooring area, then continue with the leading and trailing edges (Figure 4).
10. Make sure to respect the expansion gap as per the specific characteristics of the product on all four sides of the room. We recommend to use the spacers to fill out the contour of the wall.
11. Note that an expansion profile may be needed as per the specific characteristics of the product.





# CLEVER CLICK RIGID

Whilst Guardian has made every attempt to ensure that this information is accurate and reliable at the time of its publication; we cannot accept responsibility for any errors, omissions, inaccuracies or any changes that have occurred since the date of publication or for the results obtained from the use of such information.

Version 1 | November 2024