


For dimensions see page 4



## FITTING INSTRUCTIONS


### APEX

### COMPOSITE ROOF

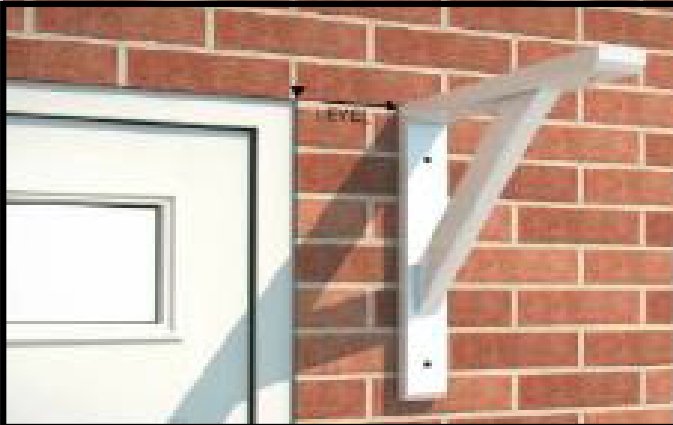

**1**

Mark a vertical line, using a level, (Dimension A) from the centre of your door

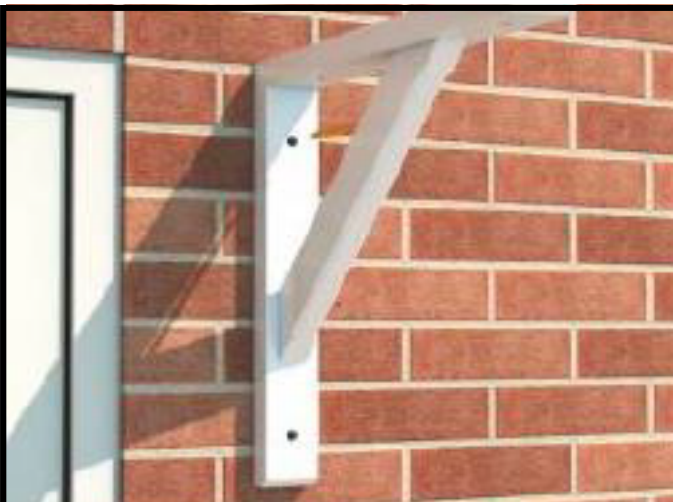

**2**

Hold a gallows bracket against the wall, at the required height, (normally just above the top of the door frame) so that the inner edge is on the line drawn.



**3**

Mark the bottom gallows bracket hole position

**4**

Remove bracket and drill hole 10mm diameter 50mm deep



**5**

Hold bracket back in place and knock plug and screw through bracket in to drilled hole, partially tighten

**6**

Using spirit level ensure bracket is vertical and mark top hole

**7**

Move bracket to one side and drill top hole 10mm dia x 80mm deep

For dimensions see page 4



## FITTING INSTRUCTIONS

### APEX

#### COMPOSITE ROOF

**8** Reposition bracket and knock plug and screw into place and tighten both screws

**9** Mark a vertical line on the wall on the other side of the door (Dimension B) from the inner edge of the fixed bracket

**10** Using a spirit level position the second bracket ensuring it is vertically straight and level with the first bracket

**11** Mark, drill and position second bracket as per instructions 3, 4 & 5



**12** Place the 2 halves of the canopy together on the floor ensuring they line up correctly and insert the 3 screws to hold the top edge of the canopy together

**13** Stick in place the top roof panel and ridge profile

**14** Carefully using 2 people lift the canopy on to the 2 fixed brackets to check every thing is lined up

For dimensions see page 4



# FITTING INSTRUCTIONS

## APEX

### COMPOSITE ROOF



**15**

Insert 2 screws through front edge of gallows bracket into the front canopy profile

**16**

Drill 2 holes through back face of canopy into the wall 10mm diameter 80mm deep, in an appropriate position to avoid mortar lines



**17**

Insert 2 screws through canopy into wall and tighten



**18**

Add finial to front top joint of canopy with a screw from inside the canopy



# FITTING INSTRUCTIONS

## APEX 1040

### TILED ROOF



**19**

Insert truss into front of canopy and fix in place

(mm)	Dimension A (mm)	Dimension B (mm)
1040	520	1040
1217	608.5	1217
1394	697	1394
1570	785	1570
1747	873.5	1747
1924	962	1924