


Contemporary Flat Canopy Fitting Instructions

- 1 Hold the canopy in place centrally above your doorway and mark the 3 (or 4) holes that are pre drilled onto the wall, ensuring that the holes line up with brick work not mortar lines. CHECK AT ALL STAGES THAT THE CANOPY IS LEVEL USING A SPIRIT LEVEL.

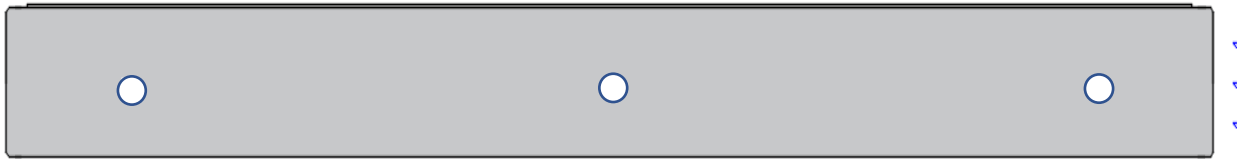

- 2 Remove canopy and drill the 3 (or 4) holes in the brick work 75mm deep with the 10mm masonry drill supplied
- 3 Apply a mastic /sealant bead across the full width of the back face of the canopy that is to be in contact with the brick work
- 4 Tap the 3/4 raw bolts (SXR10x100 supplied) through the back face of canopy then hold the canopy back in position
- 5 Tap the 4 raw bolts into the brick work until the flange face of the raw plug touches the back face of the canopy
- 6 Tighten each of the bolts until tight against the face of the canopy

